

Touchless Boat Cover™

Do's & Don'ts

DO's

1. DO keep shrubbery and vines away from your boat cover, as many bushes contain acids which can be harmful to the fabric.
2. DO keep your boat cover clean by simply brushing the cover with a clean household broom, rinse with water and let air dry.
3. DO secure your boat cover when severe weather is imminent. Severe weather may damage fabric or metal components.
4. DO lubricate pulleys with WD-40 periodically by spraying WD-40 on pulleys and shaft.
5. DO be sure boat is centered inside of the cover, from left to right, and front to back, before lowering the cover.

DON'Ts

1. DO NOT USE DETERGENTS or harsh cleaners or scrub too vigorously with an abrasive cleaner when cleaning your boat cover! (See fabric cleaning instructions for your fabric included in your Touchless Boat Cover owner's package)
2. DO NOT allow water to stand on the boat cover, which could result in pocketing and possible stretching.
3. DO NOT overlook small rips or tears. If a sharp object punctures the fabric, it should be repaired.
4. DO NOT permit leaves, twigs, dirt, etc. to remain on your boat cover, as they might cause staining, of the fabric, or allow mold or mildew to develop.
5. DO NOT lay anything on the top of your cover.
6. DO NOT leave cover raised in the "UP" position for extended periods of time.
7. DO NOT allow cover to come in contact with anything (boat, dock, etc.) when cover is in operation (going up or coming down).